


Effisus Multishapper Installation instructions – step-by-step



- Make sure that all surfaces are properly clean and dry
- Cut Multishapper membrane according to our chart guide
- Shape it into desired geometry

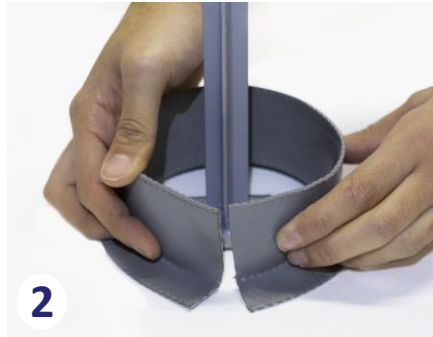

- Place Multishapper curb around penetration (distance ≥ 25 mm)
- Mark the exterior perimeter
- Remove the curb and set it aside



- Use Effisus M-1 Sealant to:
 - Seal the base of the penetration
 - Coat penetration surface up to 75 mm
 - Apply a 7mm bead to curb bottom



- Position the Multishapper curb and press it down firmly
- Insert the metal clip
- Apply a bead of M-1 to seal interior edges of the clip
- Pour the 1-P Sealant and fill the curb up to the top