


Effisus Stopper System

INSTALLATION INSTRUCTIONS - EFFISUS STOPPER SYSTEM

Surface Preparation

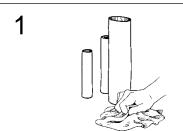


Remove all previously applied caulk, mastic, cement, asphalt and other contaminants from penetrations with a wire brush to ensure proper bonding.

Brush away all gravel and loose granules.


Curbs Position

2



Position the exterior Effisus Stopper EC/CE Curbs around the penetrations in the desired configuration. Use a marker to trace the perimeter of the Effisus Stopper EC/CE Curbs, then remove them and set aside

Effisus Stopper M-1 Sealant Application

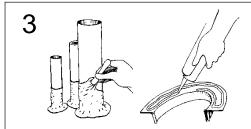

Seal the base of each penetration with the Effisus Stopper M-1 Sealant and coat the penetrations surfaces up to three inches above the roofline.

Hold a section of the Effisus Stopper EC/CE Curb flat side up, and apply two parallel beads of Effisus Stopper M-1 Sealant over the entire bottom surface. Repeat the process with the other(s) Effisus Stopper EC/CE Curb section(s).


Bonding the Effisus Stopper EC/CE Curb

4



Place the coated curb section on the roof surface in the position marked in step 2. Place the remaining section(s) of curb on the roof surface to complete the form. Press down firmly until M-1 extrudes from outside edges and scarf joints. Tool the joints smooth. Apply a bead of M-1 around the outside perimeter of the base of the installed curb, and tool to form a smooth fillet.

Filling the Curb with Effisus Stopper 1-P Sealant

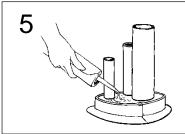

Pour the Effisus Stopper 1-P Sealant: fill the Effisus Stopper EC/CE Curb with Effisus Stopper 1-P Sealant up to the curb top. Tool off to a smooth surface.

